A NEW DIMENSION OF IMMERSIVE ENTERTAINMENT

HOLOGATE.COM

HOLOGATE Specs

- 270ft² VR space
- 1-4 User

- HTC Vive, 90fps
- Deluxe audio head strap
- Touchscreen interface
- Spectator monitor and sound
- Interactive LED lighting

THE SETUP

HOLOGATE

HOLOGATE

The next level of immersive entertainment.
Build around a turnkey solution it's specifically designed to wow spectator and players equally.
Play with your friends in a new dimension.

INTERFACE

HOLOGATE

- Touch Screen Control
- Management
- User Login
- Game Control

WAKE UP SYSTEM

HOLOGATE

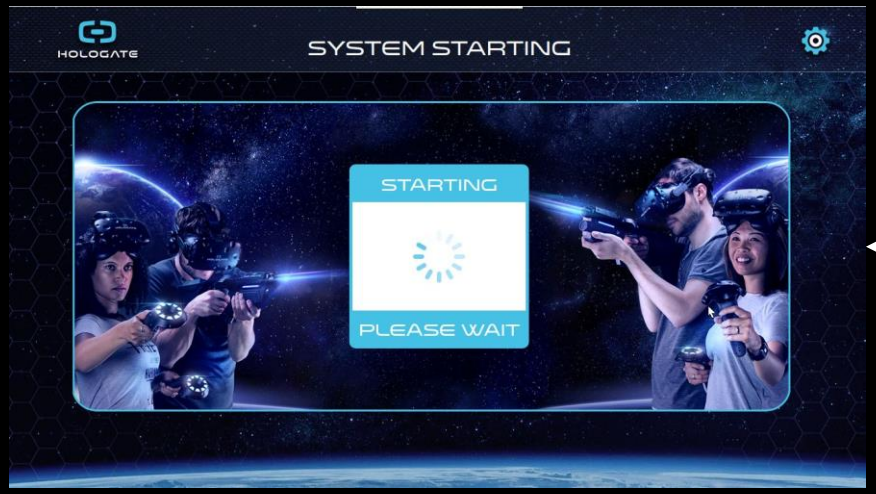

CHOOSE GAME

HOLOGATE

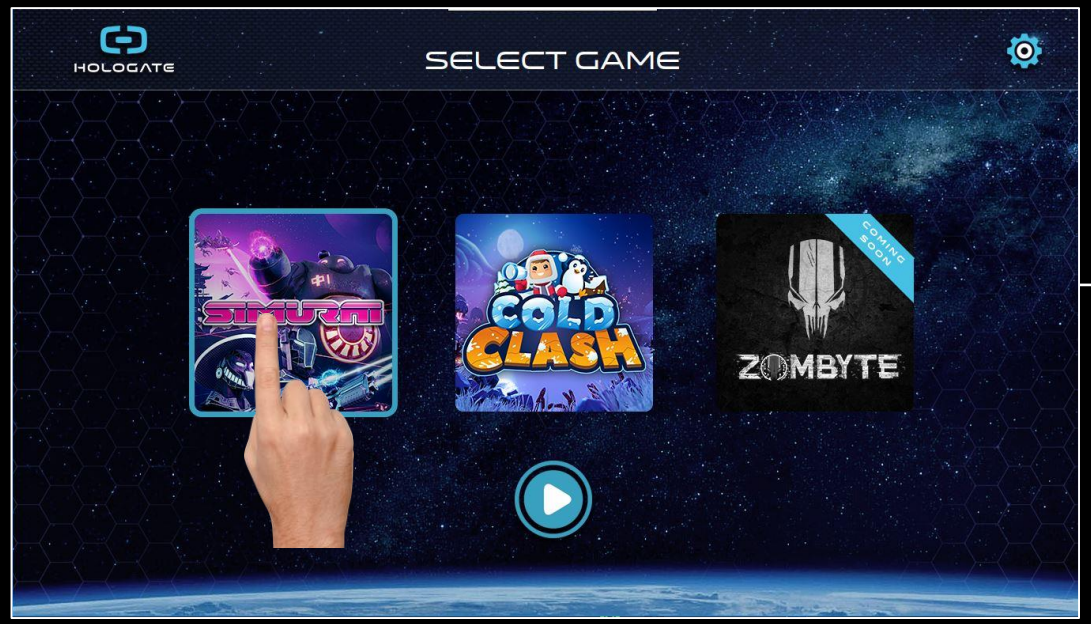

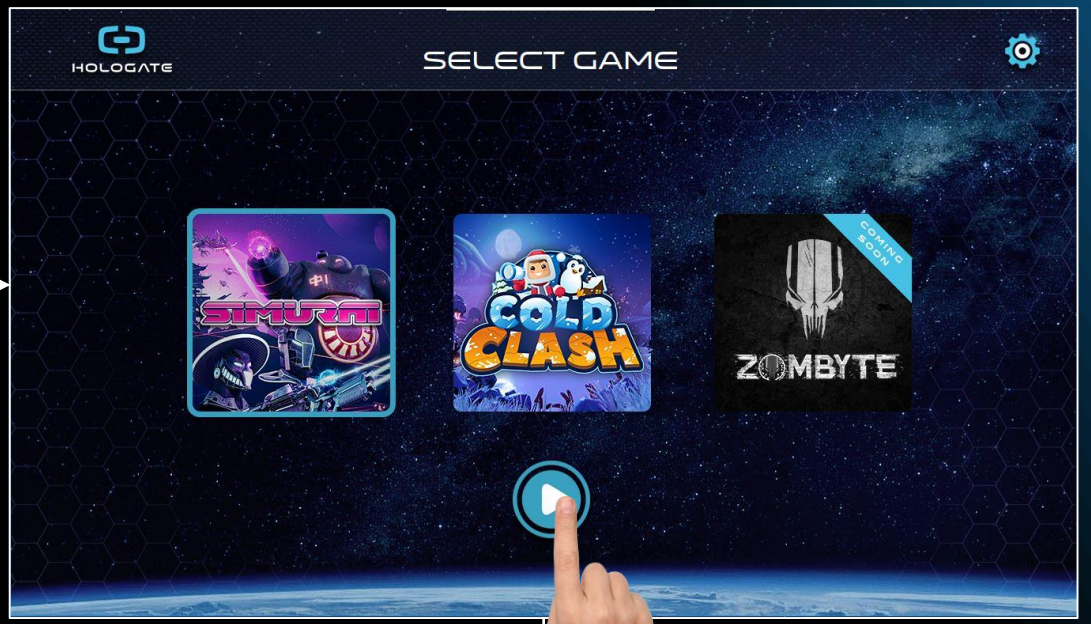

LOGIN SCREEN EXPLANATION

MENU

Battery Status Controller

START GAME (double tap)

GAME MODES

PLAYER NAME AND LOGIN

CHANGE GAME

HOLOGATE

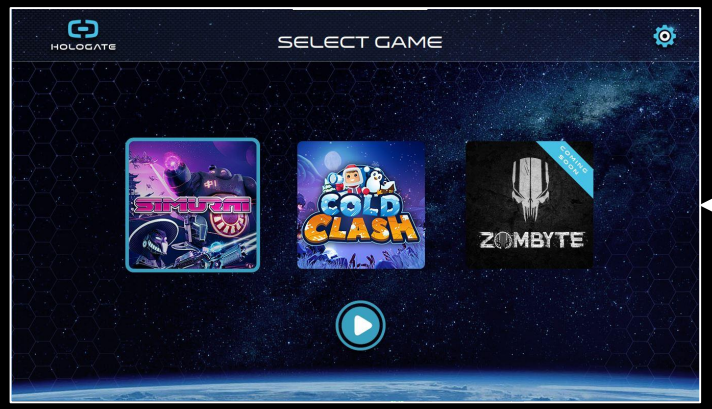

LOG IN PLAYERS

CHILD OR ADULT

USE KEYBOARD TO TYPE NAME

SWITCH GENDER

SHUTDOWN SYSTEM

HOLOGATE

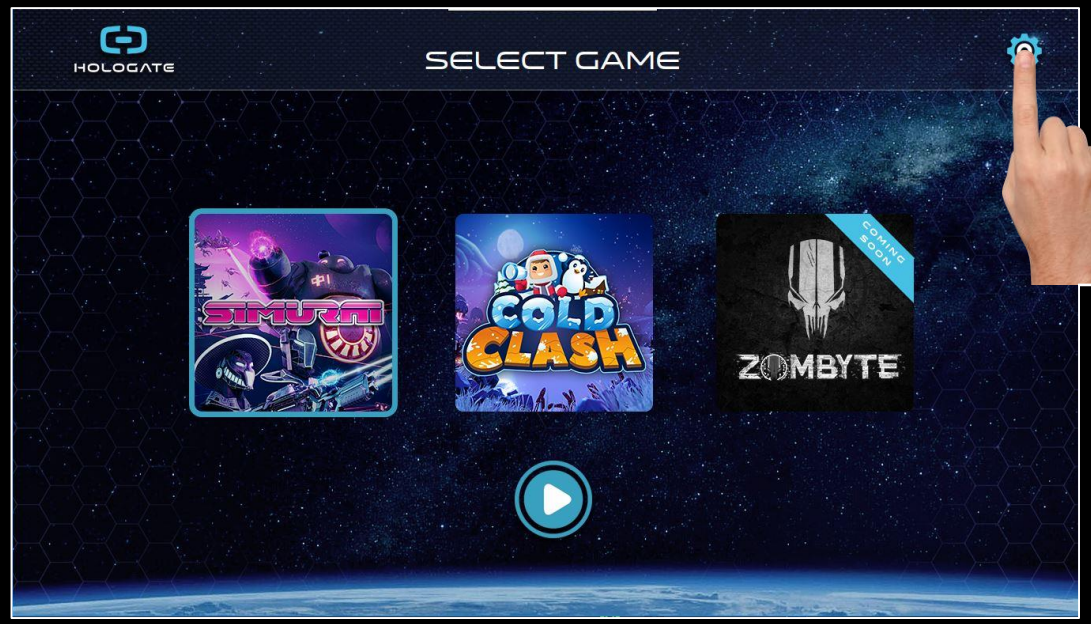

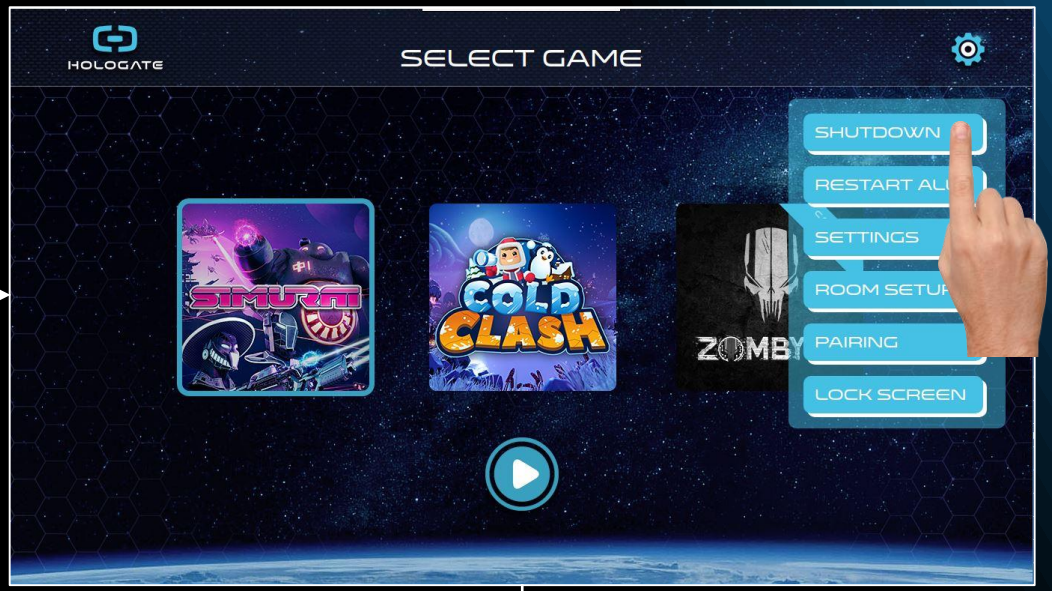

ROOM SETUP

HOLOGATE

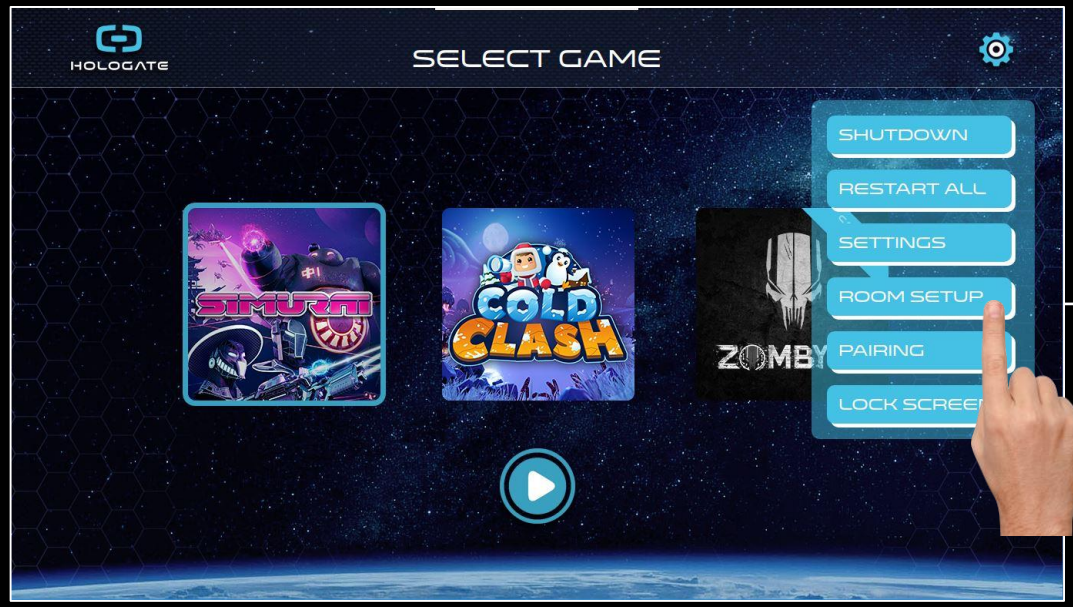

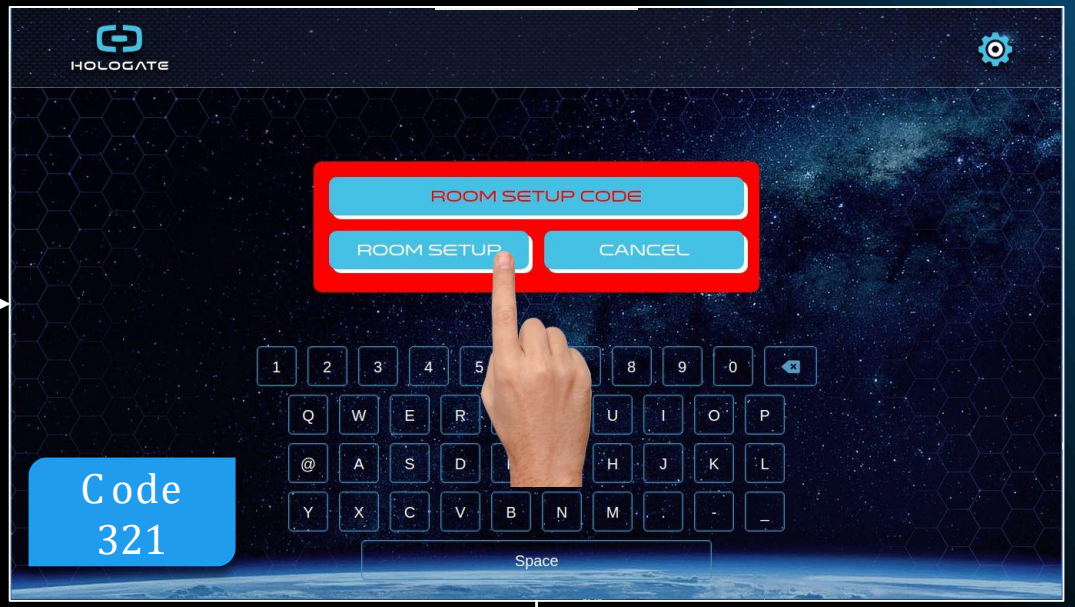

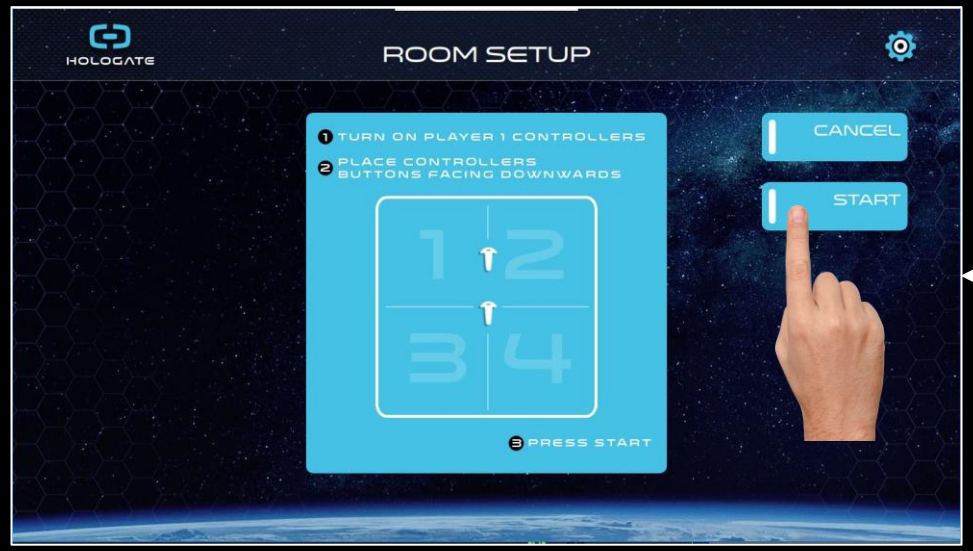

PAIRING

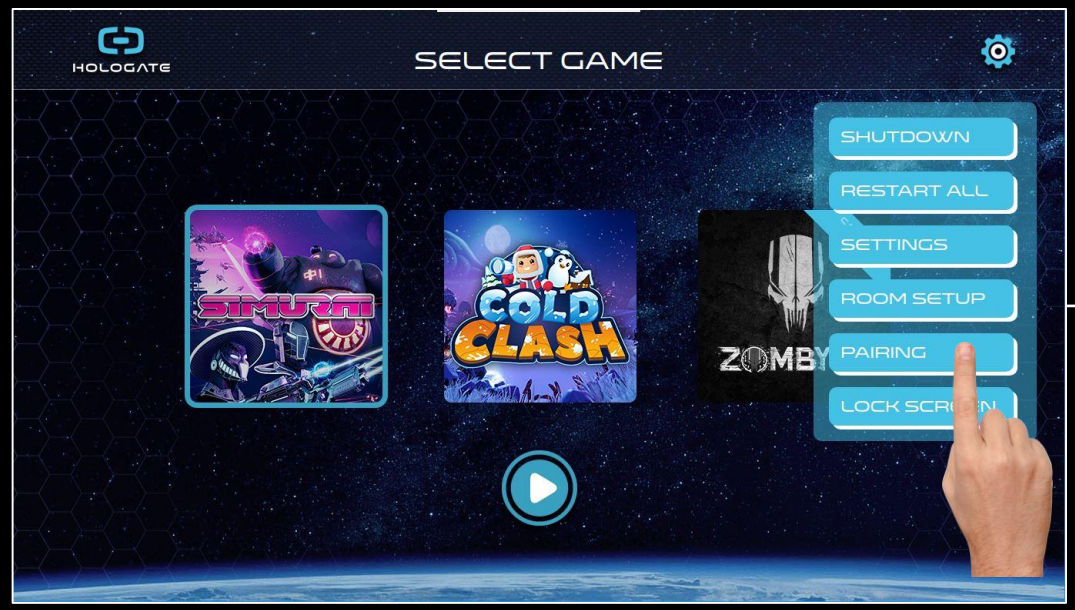
HOLOGATE
SELECT GAME
SIMURAI
COLD CLASH
ZOMBY
SHUTDOWN
RESTART ALL
SETTINGS
ROOM SETUP
PAIRING
LOCK SCR

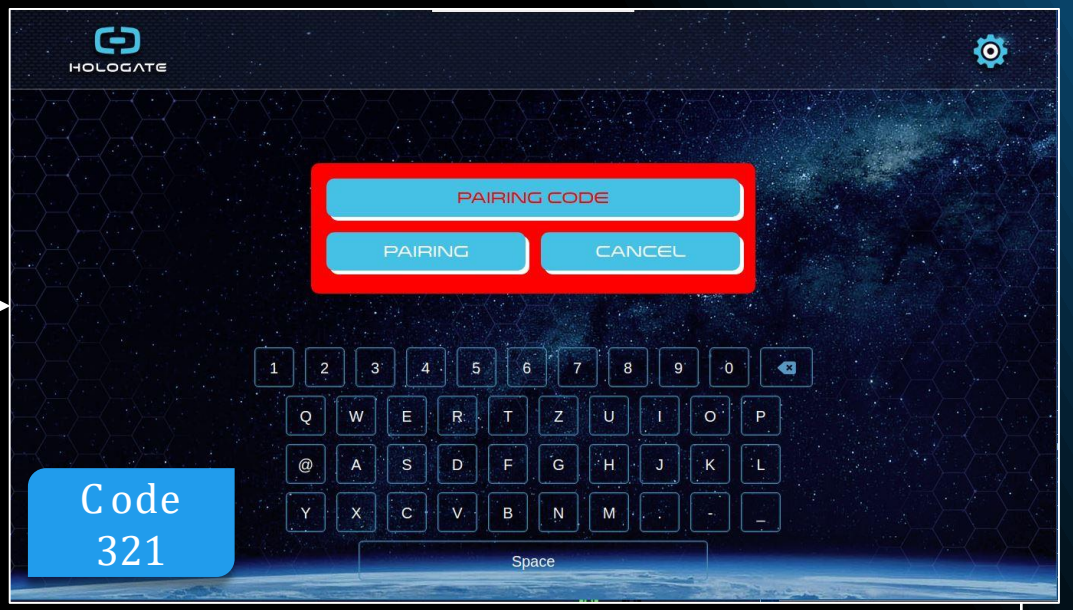
HOLOGATE
PAIRING CODE
PAIRING
CANCEL
1 2 3 4 5 6 7 8 9 0
Q W E R T Z U I O P
@ A S D F G H J K L
Y X C V B N M . - _
Space
Code
321

HOLOGATE
PAIRING
CANCEL
1
PAIR
2
PAIR
4
PAIR

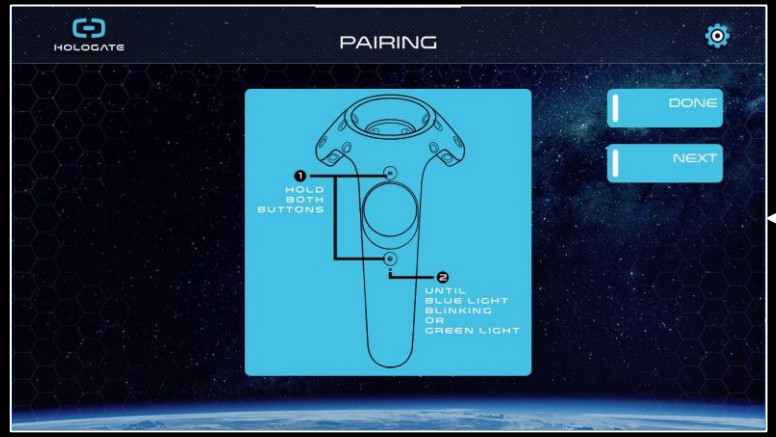
HOLOGATE
PAIRING
DONE
NEXT
1 HOLD BOTH BUTTONS
2 UNTIL BLUE LIGHT BLINKING OR GREEN LIGHT

GAME MENU

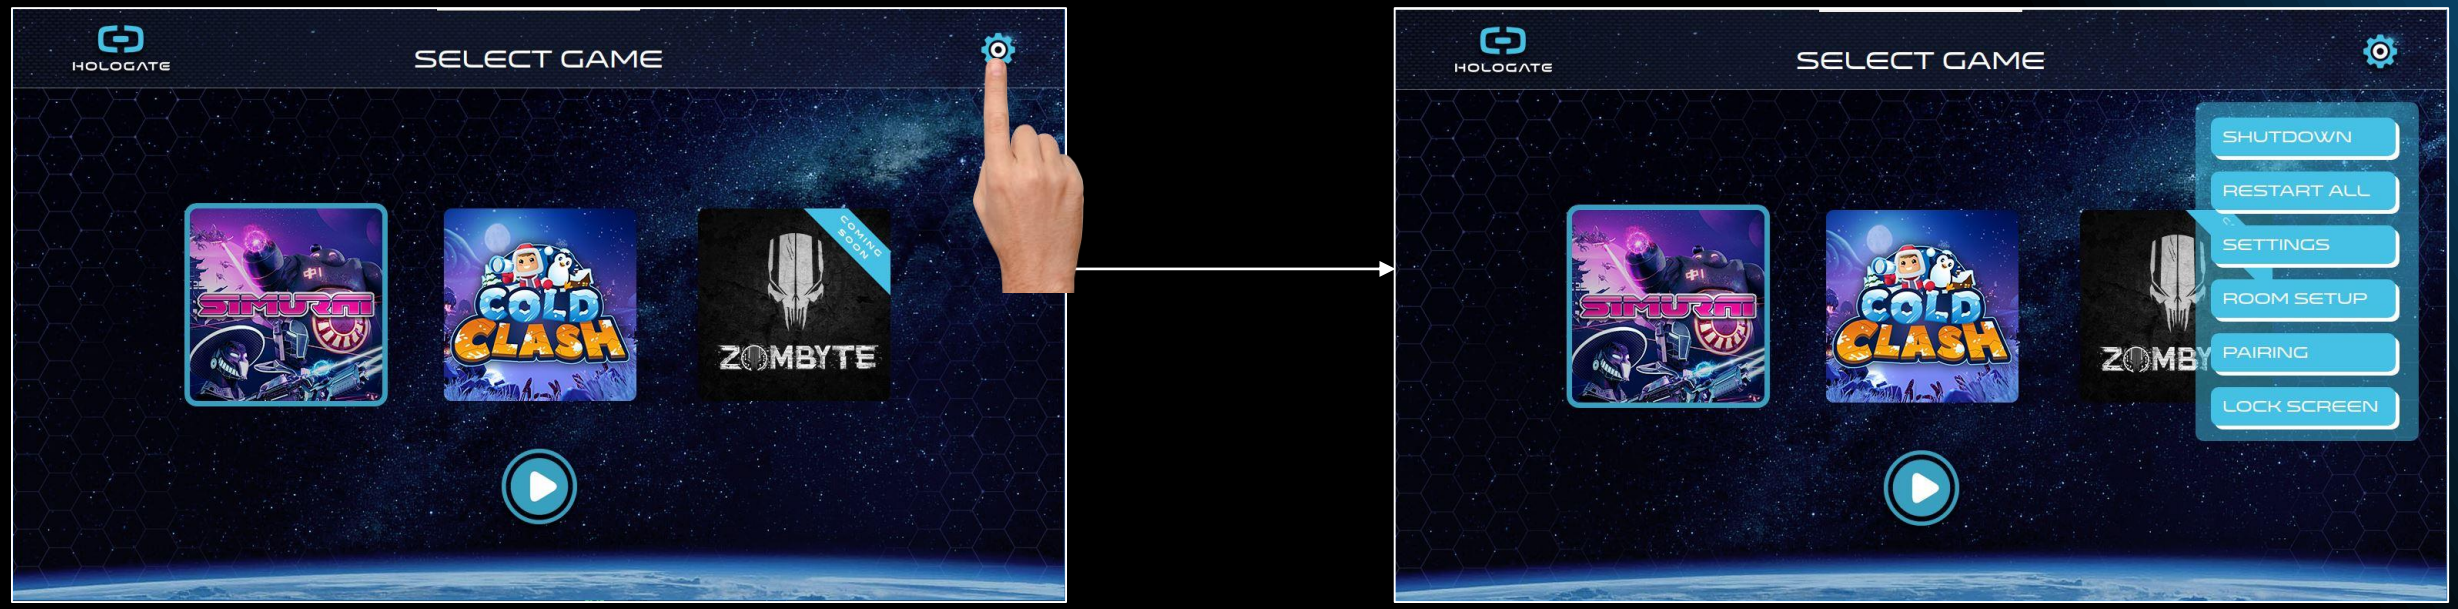

Shutdown – Shutdown System

Restart all – Restart the Full System (Touchscreen included)

Settings – Game and System Settings

Room Setup – Calibrate Virtual Reality Room

Pairing – Pair Controller to HTC VIVE

Lock Screen – Lock the screen

GAME MENU - SETTINGS

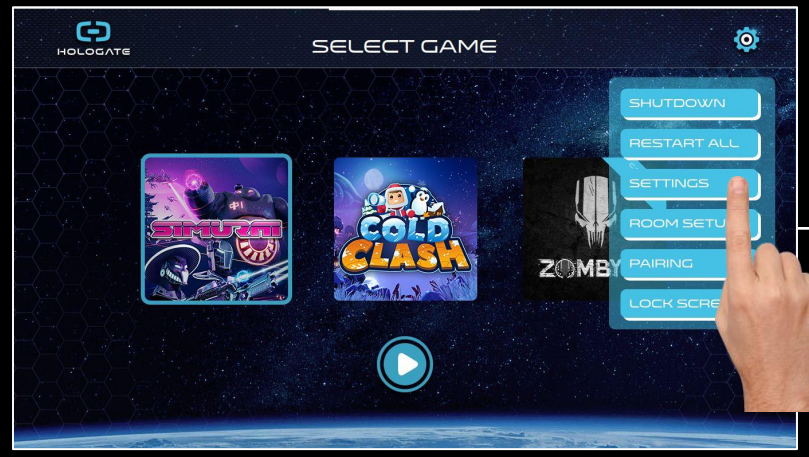

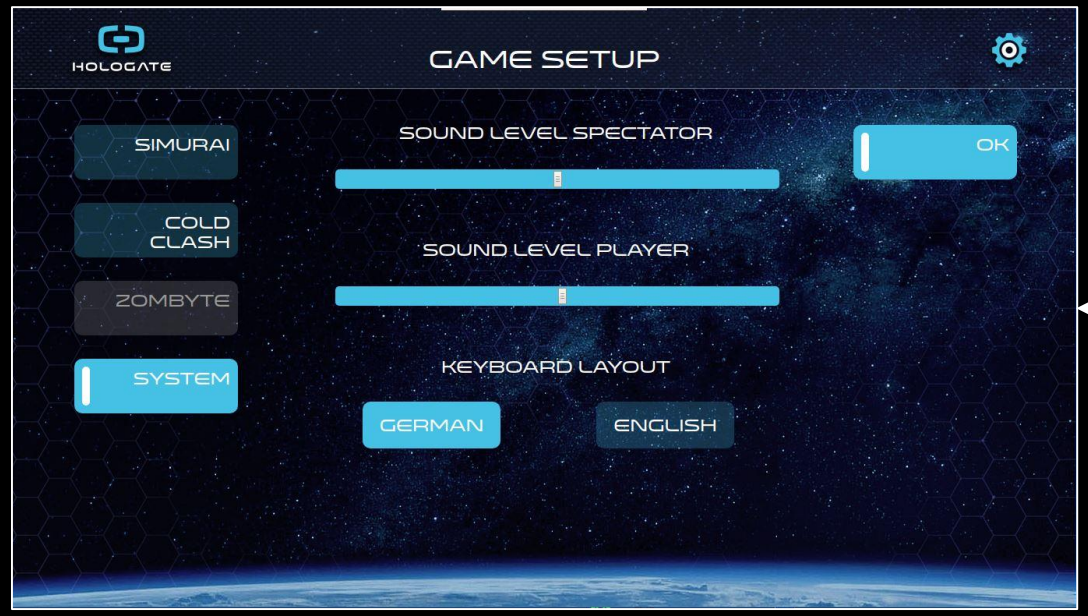

CONTROLLER FREEZE

If a controller leaves the HOLOGATE or gets fully covered it can freeze mid air

1. Turn controller OFF
   Turn controller ON
   → Yes! → **SOLVED**
2. Turn OFF controller 1
   Turn ON controller 2
   → No?
3. Quit game
   Launch game
   → No?
4. Restart HOLOGATE
   → No?
5. Call support
   → No?

HEADSET GREY OR BLACK SCREEN

HOLOGATE

If a headset leaves the HOLOGATE or gets fully covered the screen can turn grey or black

1. Cover HTC VIVE sensors for 3 seconds — Yes! → **SOLVED**
2. Check HTC VIVE cable connection — No?
3. Quit game
   Launch game — No?
4. Restart HOLOGATE — No?
5. Call support — No?

CONTROLLER NOT VISIBLE

HOLOGATE

If a controller leaves the HOLOGATE or gets fully covered it is not visible in the game

If a controller has no power, it is not visible in the game

1. Add Player on touch screen — Yes! → **SOLVED**
2. Cover controller sensors for 3 seconds — No?
3. Check battery status — No?
4. Quit game Launch game — No?
5. Restart HOLOGATE — No?

No? → **Call support** 6.

PLAYER SPEECH COMMUNICATION NOT WORKING

HOLOGATE

If a computer has a problem to build up a player connection, the HOLOGATE needs a restart

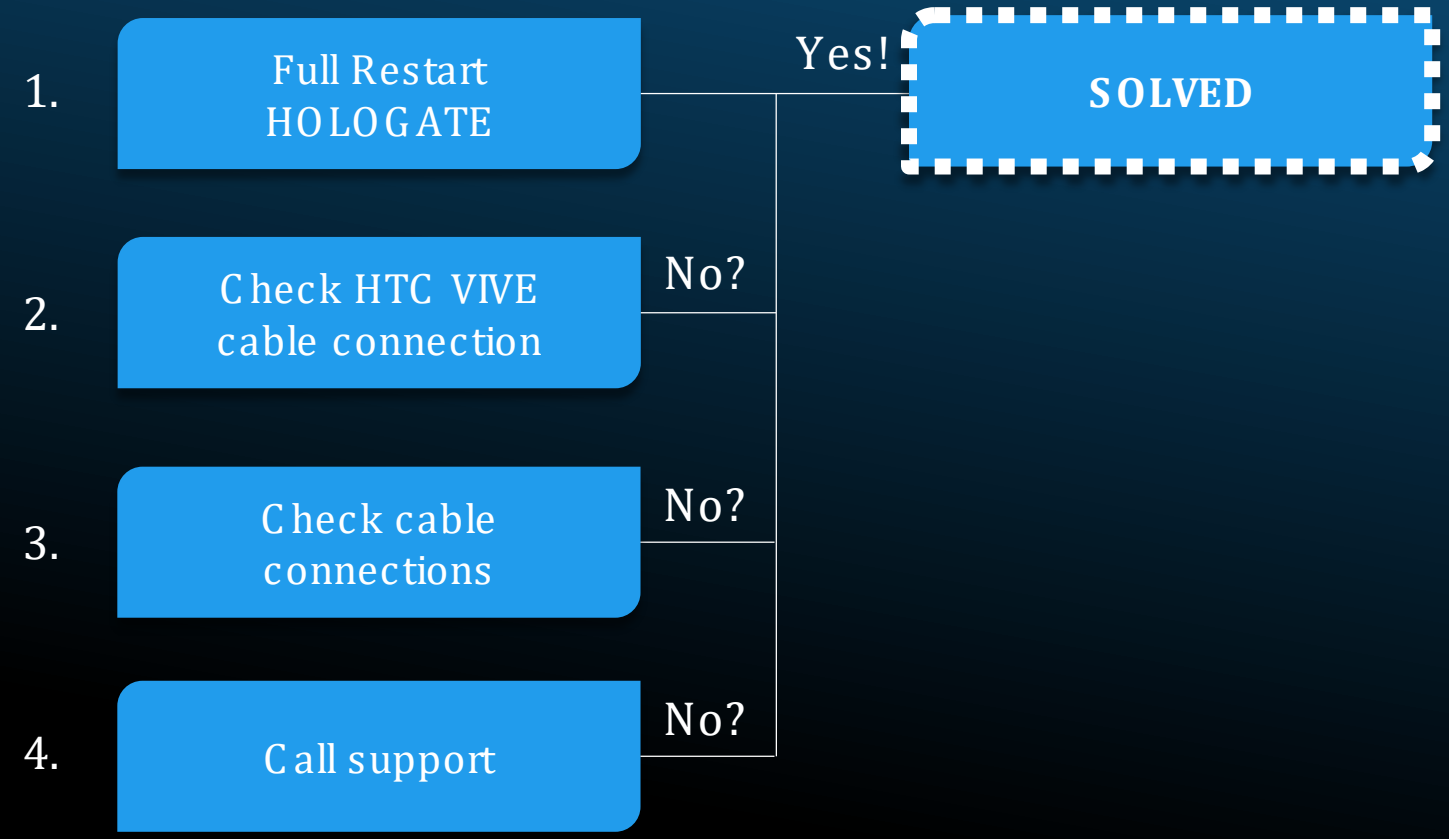

SPECTATOR BLACK SCREEN

If headset lost the connection to the game, the spectator screen can turn black

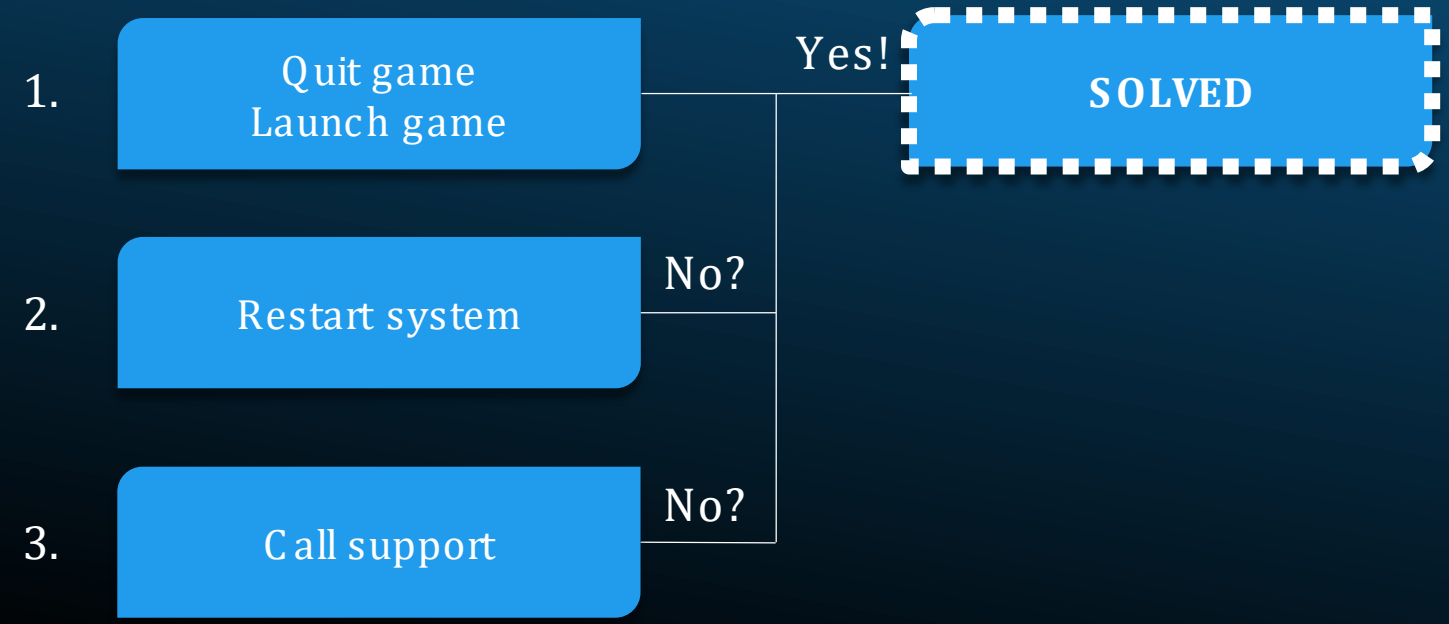

TOUCHSCREEN IS BLACK

HOLOGATE

If the touchscreen is black, the power cable could be disconnected or the touchscreen is OFF.

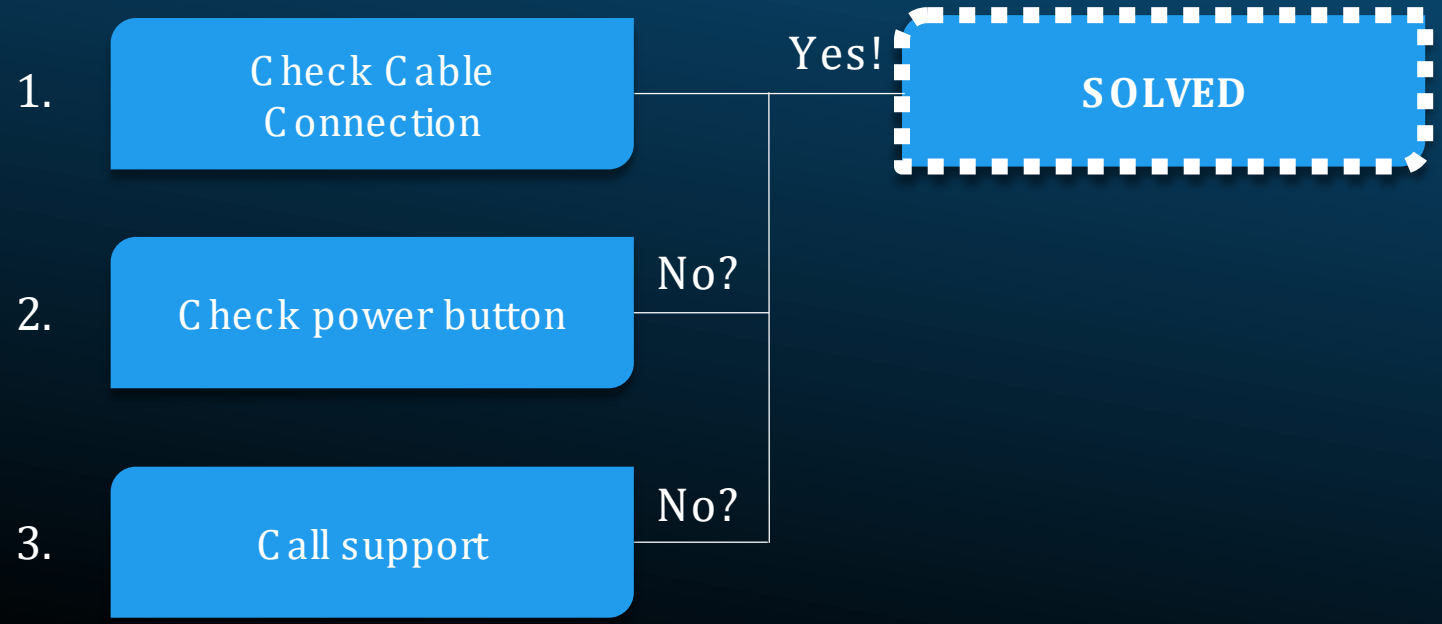

This is a last resort if nothing else works

3x

Push HOLOGATE logo

Type admin password 3 2 1

System will restart completely

CONTROLLER STATUS

GREEN LED

Controller is on

WHITE CONSTANT LED

Controller fully charged

RED BLINKING LED

Controller battery empty

ORANGE LED or with **WHITE BLINKING**

Controller charging

CONTROLLER STATUS

BLUE CONSTANT LED

1. *Game running - Controller is depaired - use pairing tool*
2. *Game not running – normal behavior - start game*

BLUE LED BLINKING

During pairing the Controller blinks blue.

OPERATION

1. *Clean after each customer with wipe*
2. *When the Controller shows less than 20% - plug in gun battery charge cable*
3. *When the Controller shows more than 90% – plug out battery charge cable*
4. *Charge gun battery over night – plug in all gun charge cables*

MAINTENANCE

1. *Daily - checkup HTC VIVE cables for damage*
2. *Monthly - vacuum PC dust filter*

info@hologate.com

A NEW DIMENSION OF IMMERSIVE ENTERTAINMENT